Translated by Rachel for Fuzzy N Chic
Do not reuse without credit or permission

www.fuzzy-n-chic.com
One stop shop for all your
Tamagotchi needs

For ages 6 and above

© TOMY

TAKARA TOMY®

すみっコぐらし™

Lots of apps to help you care for them

すみっコスマホ

Sumikko Smartphone

User Manual

Lots of care and play!
64
Apps Installed

You can view notifications with the cover closed!

The more you take care
The more you can play!

2 Cameras
Shoot in selfie or normal mode!

Rechargeable
No batteries required!

Set Contents

- Sumikko Smartphone
- USB Charging Cable
- Instruction Manual

Liquid Display	2.4 inch LCD touch panel
Resolution	320 x 240 Liquid Crystal Display
Continuous Use Time	Approx 2 hours when fully charged. * Takes 2 hours to fully charge. * Depends on the type of usage

Built-in Rechargeable Li-ion Battery.

Pictures for illustration purposes only and may differ from actual product.

©2023 San-X Co., Ltd. All Rights Reserved.

⚠ Warning

Parents, please read

This device contains small parts. Not suitable for children under the age of 3 as it may pose a choking hazard.

⚠ Notice

●ACアダプターを使用する際は、必ずタカラトミーACアダプターTYPE5U（別売り）の専用ACアダプターを使用してください。●タカラトミーACアダプターTYPE5U（別売り）の注意事項を必ずよく読んでからご使用ください。●遊ぶ際は、画面に目を近づけすぎないようにして、明るい場所で遊んでください。●強い光や光の点滅の刺激によって気分が悪くなったら、直ちに使用をやめ、医師に相談してください。●目の疲労感や不快感を覚えることがありますので、長時間連続して使用せず、適度に休憩をとってください。●この製品には小型の磁石が含まれています。万一磁石を飲み込んだ場合には、すぐに医師の診察を受けてください。●歩きながらのご使用はおやめください。思わぬ事故の危険があります。●耳の近くでは使用しないでください。●液晶画面にはガラスを使用しています。強く押したり、たたくなど乱暴な遊びをしないでください。●縁部が鋭い箇所がありますので、注意してください。●プラスチック袋は頭から被ったり、顔を覆ったりしないでください。窒息する恐れがあります。●思わぬ事故の危険がありますので、3才未満のお子様には絶対に与えないでください。●充電用USBケーブルは、指などに巻きつけたりしないでください。血がかよわなくなり危険です。●内蔵された充電式電池を誤使用すると発熱・破裂・発火・液もれの危険があります。下記に注意してください。・ショートさせると大電流が流れ、危険です。絶対にさけてください。・充電済のリチウムイオン電池への再充電は、絶対にしないでください。過充電になり危険です。・水にぬれたらすぐに使用をやめてください。ショートの原因になります。・水や火の中に入れたり、分解、ハンダ付けは絶対にしないでください。・火の近く、高温・多湿の場所での使用、充電、保管はしないでください。・廃棄するときは、自治体の廃棄物処理の指示に従ってください。

1 Part Names

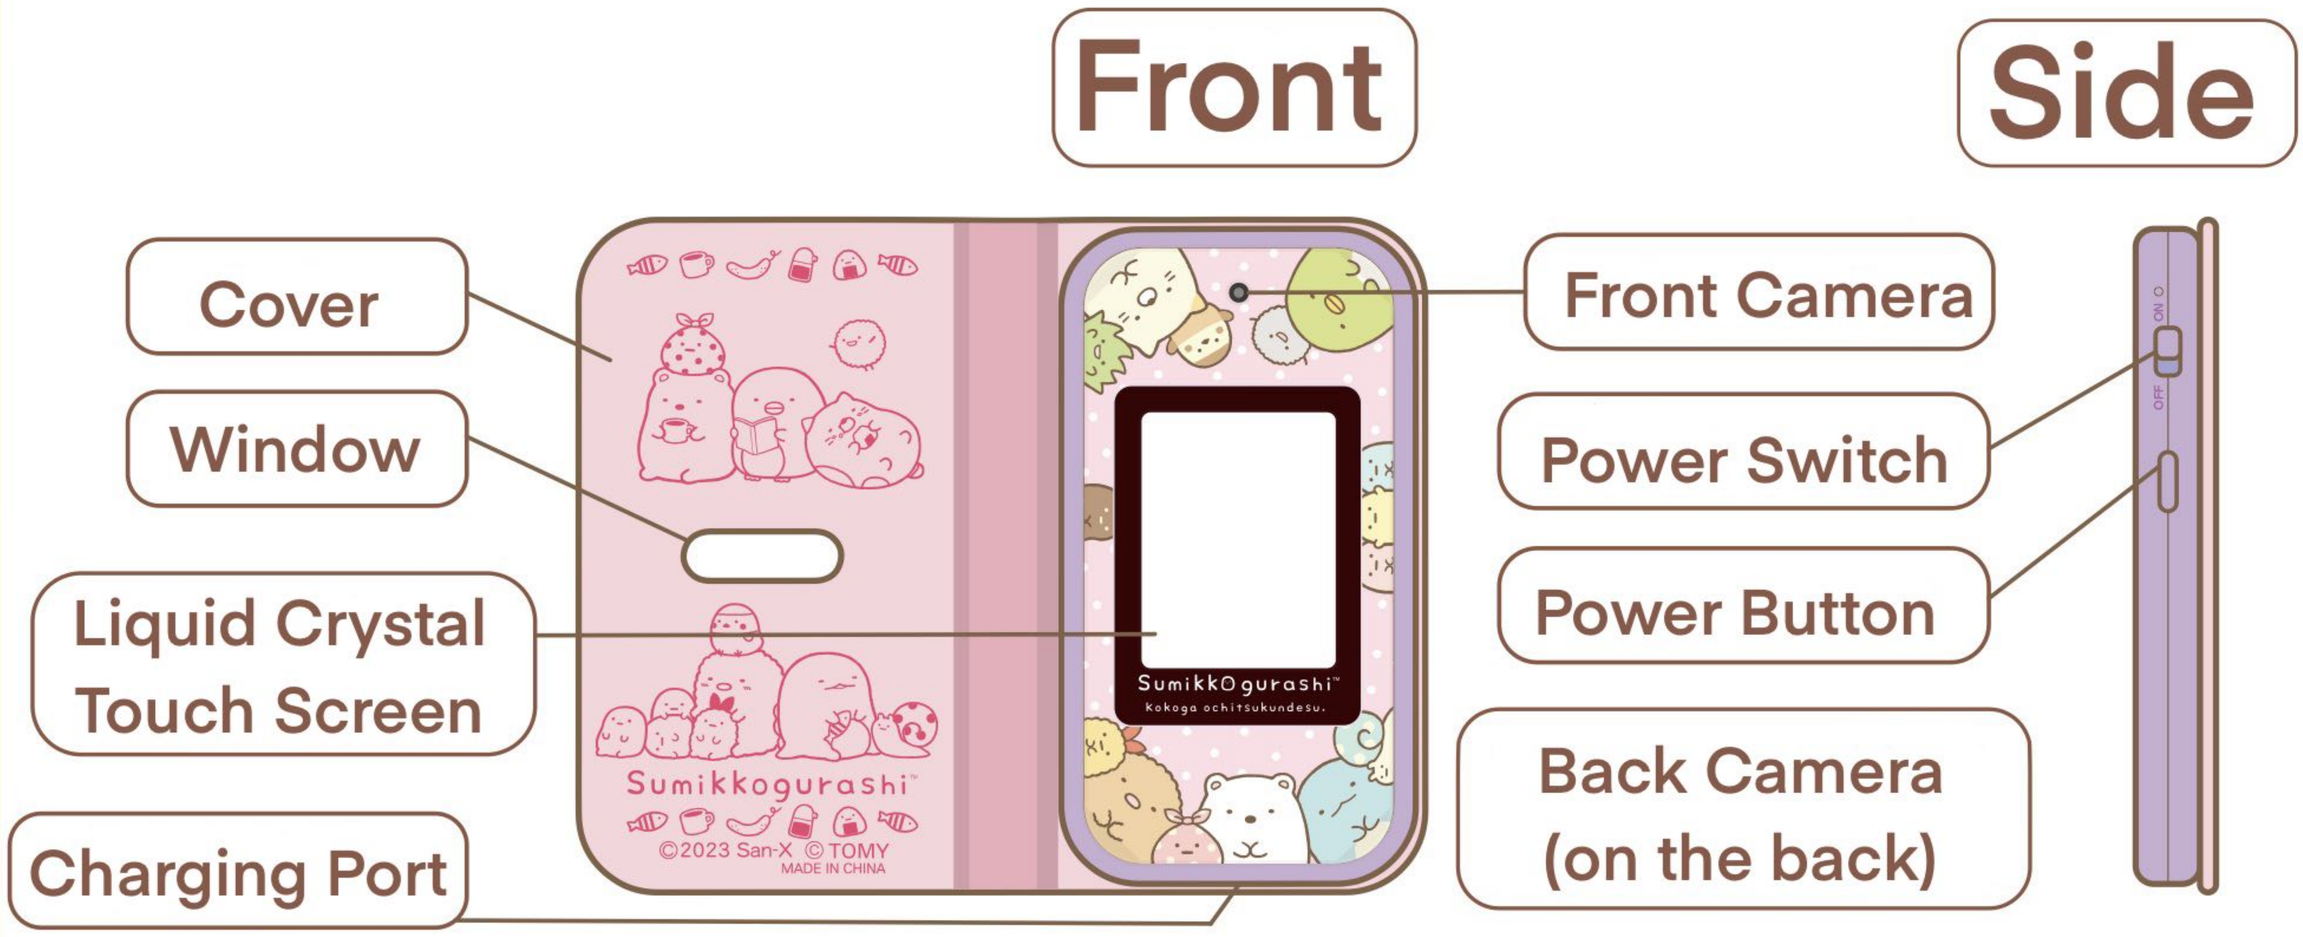

2 Sleep Mode

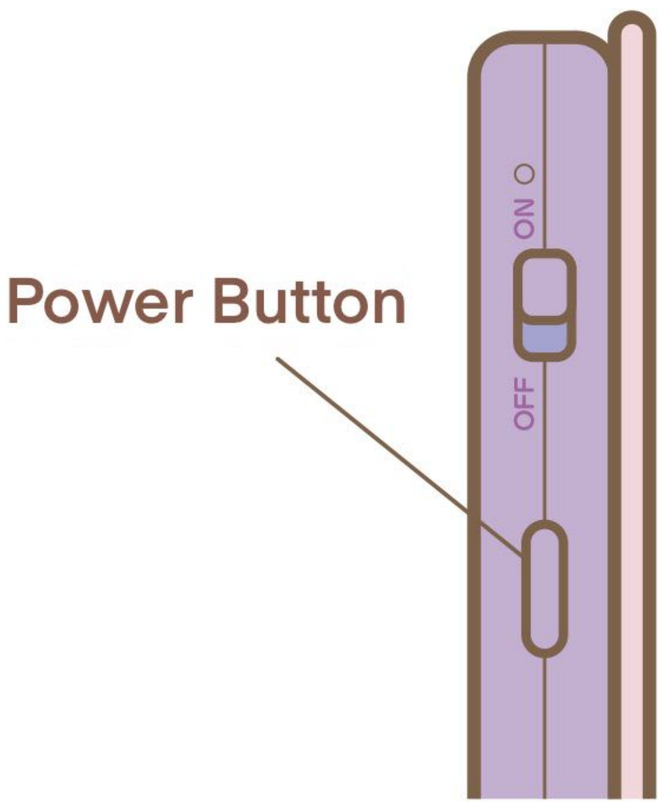

If you do nothing, it will go to sleep after 90 seconds. In addition, it will go to sleep immediately after closing the cover, unless otherwise instructed during a game. To wake it up, with the cover open, press and hold the Power Button for 6 seconds.

*When you are done playing, put it to sleep without turning the Power Switch to OFF. Do not turn the Power Switch to OFF unless you are not going to use it for a long time.
If Power Switch is turned to OFF, charging will no longer be possible.

When disposing this product

Li-ion01

Electronic Toy Recycling Info Center

This product uses a lithium-ion battery. Lithium-ion batteries are an important resource and can be recycled. Please do not remove the lithium-ion battery yourself. Instead, please visit the website link below.

www.takaratomy.co.jp/support/recycle/

3 Charging

Turn the Power Switch to “ON”. Press and hold the Power Button to turn on the screen and check the remaining battery level, which is displayed at the top right of the screen. It will change to a charging icon when you are charging the device.

Battery Depleted　Charging　Charging Complete

Charging with USB Cable

To charge, plug it to a PC or something similar.
*When charging is finished, immediately remove the charging USB cable.
*If the charging icon does not appear even after you start charging, or if the charging complete icon does not appear even after 2 hours of charging, remove the charging USB cable and stop using immediately.

Mini-USB

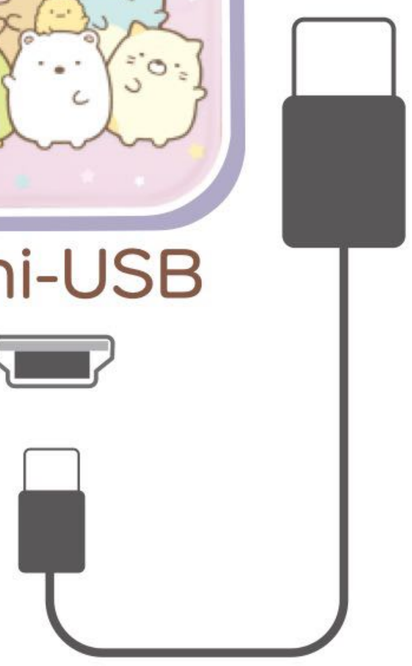

Charging with AC Adaptor

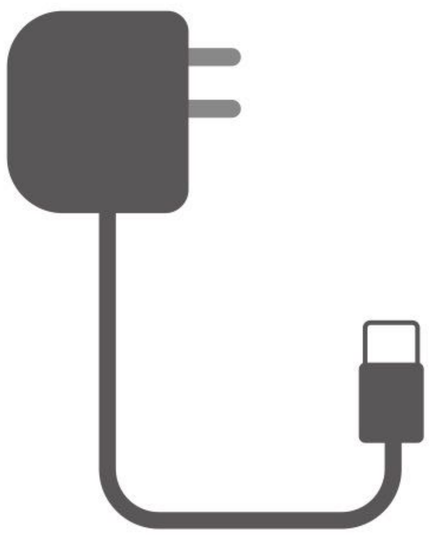

To charge with AC Adaptor, please only use the Takara Tomy toy AC Adaptor TYPE5U (sold separately). Please read the precautions of the AC Adaptor carefully before use.

≪ Warning Screen ≫

When the screen on the right appears, charge the battery.
If the volume becomes low or the screen becomes dim, charge the battery.

4 Initial Setup

Date

Set the date.
The date can be set up to year 2033.

Time

Set the time.

5 Lock Screen

Turn Power Switch to “ON”, then long press Power Button to display the Lock Screen.

Touch the Lock Screen to open the Home Screen.
The wallpaper of the Lock Screen can be changed from Wallpaper Settings

6 Home Screen

Slide left and right on the Home Screen to select the app you wish to use.
New apps can be purchased from the App Store.

From each of the app’s screen, you can return to the Home Screen by pressing the Power Button.
The screen responds to firm touch, so press firmly on the screen when touching.

*Once an app is downloaded, it cannot be deleted unless the device is reset.
*App icons cannot be rearranged.

When this happens

Screen doesn't turn on when Power Button is pressed.

Make sure the Power Switch is turned on (up position).
If the device is not charged, charge it.
If the screen does not turn on after pressing the Power Button, press and hold for 6 seconds.
The power might be off even if the warning screen does not appear.

Device is not charging

Ensure that the charging USB cable or Takara Tomy AC Adapter TYPE5U (sold separately) is connected correctly.
Check that the Power Switch is turned on (up position).
If the screen is turned on, check the battery icon on the top right.
Check if the charging complete icon is displayed when the device is plugged into charging.

Nothing changes even when I touch the screen

When touching the screen, press onto the screen firmly.
If the screen is not on, press the Power Button to turn it on.
If the touch response is poor, adjust it using the Touch Correction in the Settings app.
If the Slide Menu is displayed at the top, press the Slide Button to close it.
Other operations cannot be performed while the Slide Menu is displayed.

Can I transfer the photos that I saved in the album into a computer?

It is not possible to transfer photos. It is only possible to be viewed on Sumikko Smartphone device.

Can the cover be removed or replaced?

The cover cannot be removed or replaced. Do not remove the cover forcefully.

QR Code Process

You can get coins by scanning QR codes and fulfilling Sumikko's wishes. You can spend the coins at app stores and online supermarkets.

Scan a QR code!

Get a request from Sumikko

Fulfill the request!

Receive coins!!

Scanning QR Code

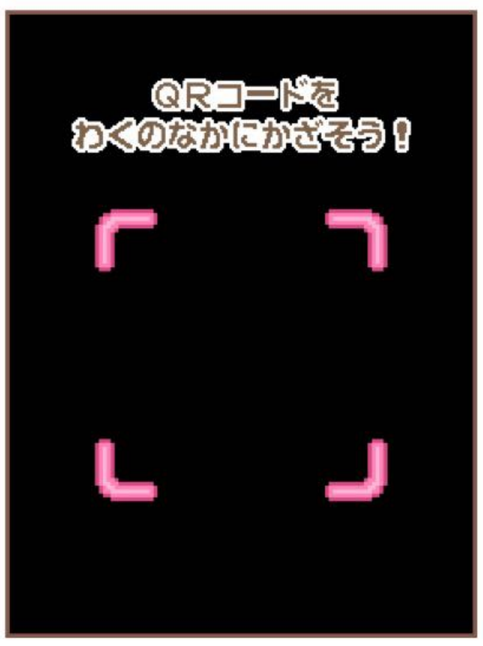

By scanning QR codes with the outer camera, you can receive requests from Sumikkos.
Take a photo of the QR code within the pink frame.

Wish List

This is an app that allows you to check Sumikkos' requests. There can be up to 8 items on the wish list. After that, the old request will be deleted and the new request will be saved.
*You cannot go to the app from this screen.

App Store

You can purchase and download apps. A ✅ will be displayed for the apps that have already been downloaded. Downloaded apps can be accessed from the Home Screen.

Tap and Pay

You can select and purchase your favourite drink by tapping to pay. When purchasing, touch the outer camera on any black object as illustrated below.

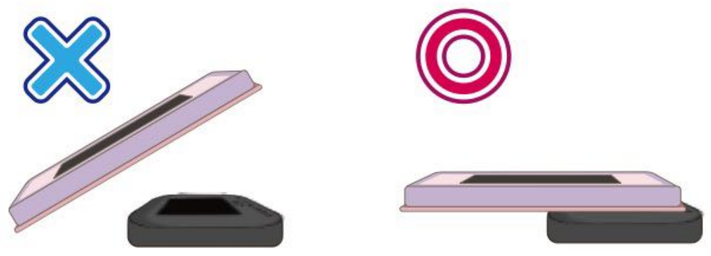

Gacha

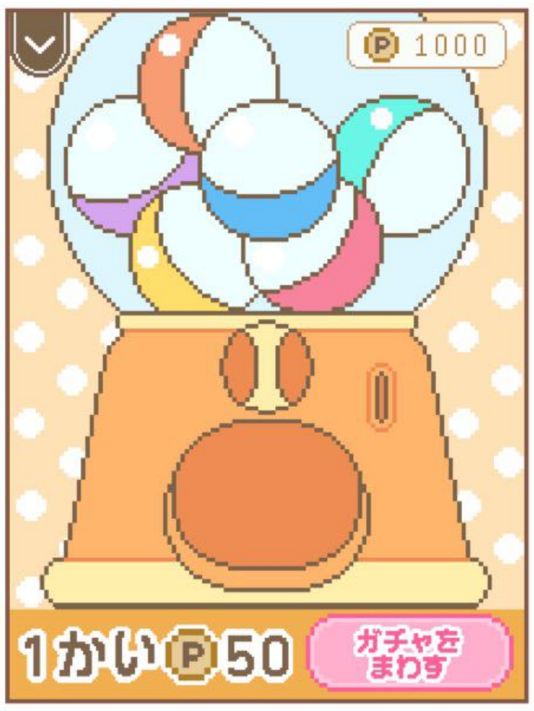

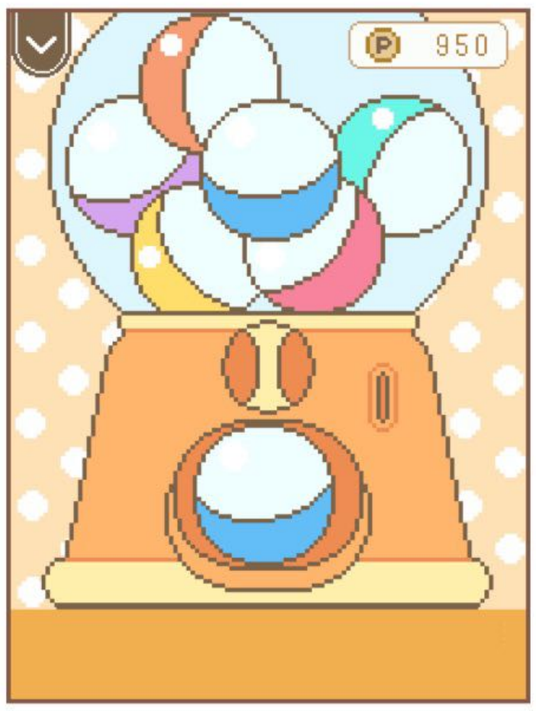

You can play gacha using points to obtain various items such as food and clothes.

Online Supermarket

You can purchase food to give to Sumikkos. Select the food and then select かう on the bottom of the screen to add to cart. You can only purchase up to 4 items at a time.

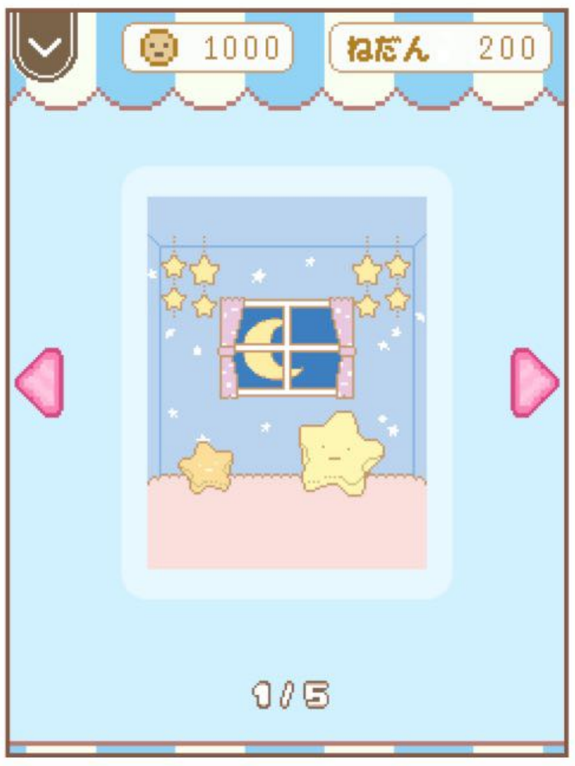

You can purchase Sumikko Room wallpaper from the Online Supermarket app. After purchasing the wallpaper, it can be set in Sumikkos' Room.

Purchased food & wallpaper

Can be received by Sumikkos in their rooms.

Point Card

You can check the points you have. Points can also be exchanged for coins. Points are automatically accumulated by playing with Sumikko Smartphone.

Sumikkos' Rooms

You can view Sumikkos' rooms. The 3 icons displayed on the top of the screen are: Telescope, Remodeling, and Cleaning.

※ Telescope must be purchased from App Store before it can be seen here.

When a fuzzy icon appears on Sumikko's head, it is a sign he wants to go out. You can let him out by touching Sumikko.

※ Telescope must be purchased from App Store before Sumikko can go out.

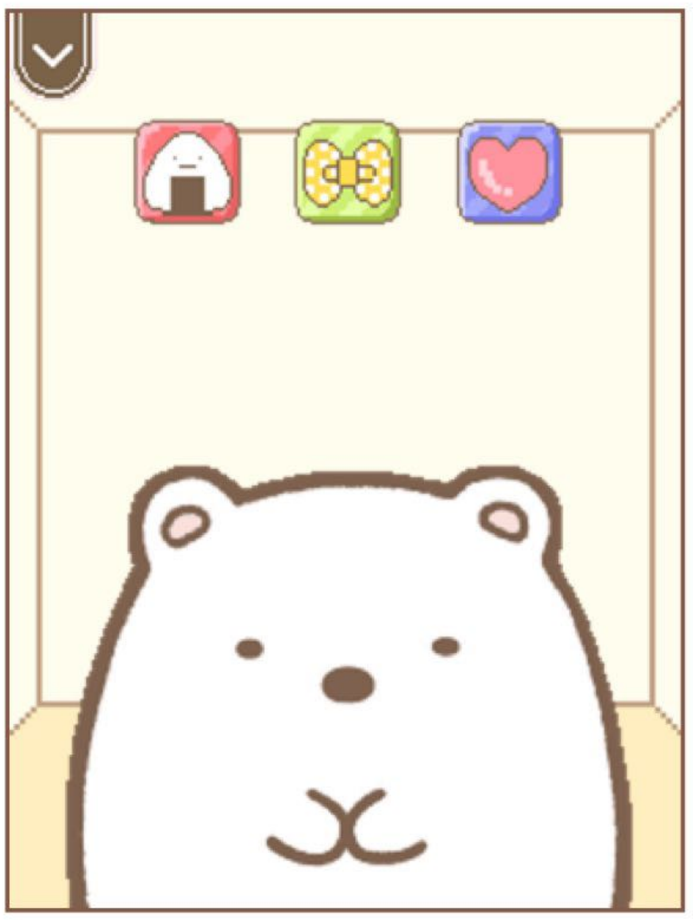

If you touch Sumikko, an individual care screen will be displayed. You can select from Food, Clothes, or Friendship Level.

In Clothes, you can take a photo of Sumikko changing into clothes that you have obtained.

You can also pat Sumikko by touching or rubbing its head.

Sumikkos' Rooms

You can feed Sumikkos food here. You can purchase food from Online Supermarket or Tap and Pay.

There are various foods that Sumikko likes and dislikes. You can see its' various reactions to them.

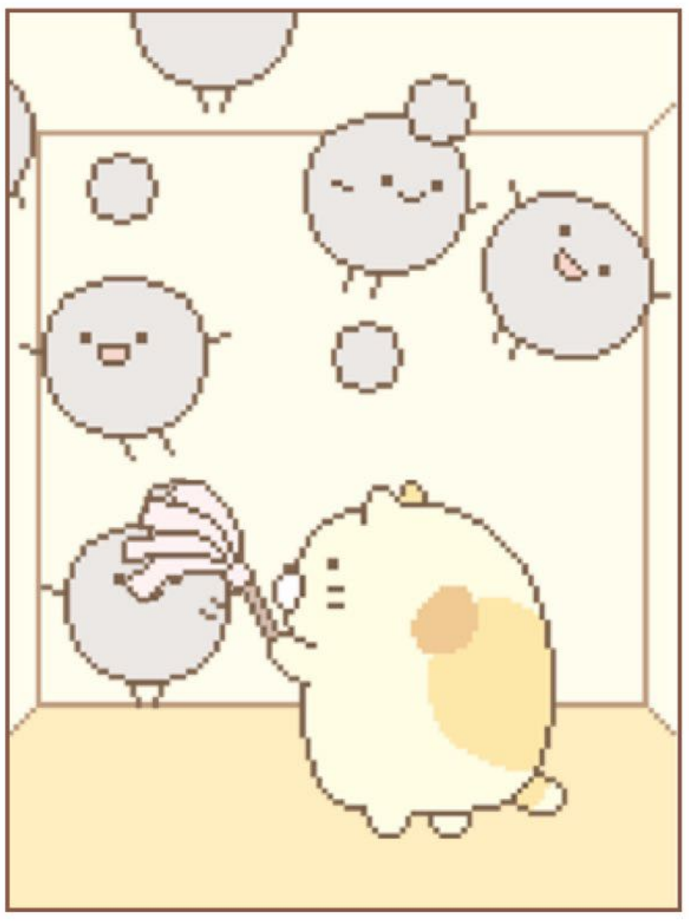

Dust appears in the room while playing. If you leave it unattended, the amount of dust will increase, so select Clean to clean the room. Touch or rub Sumikko to clean the room by dusting.

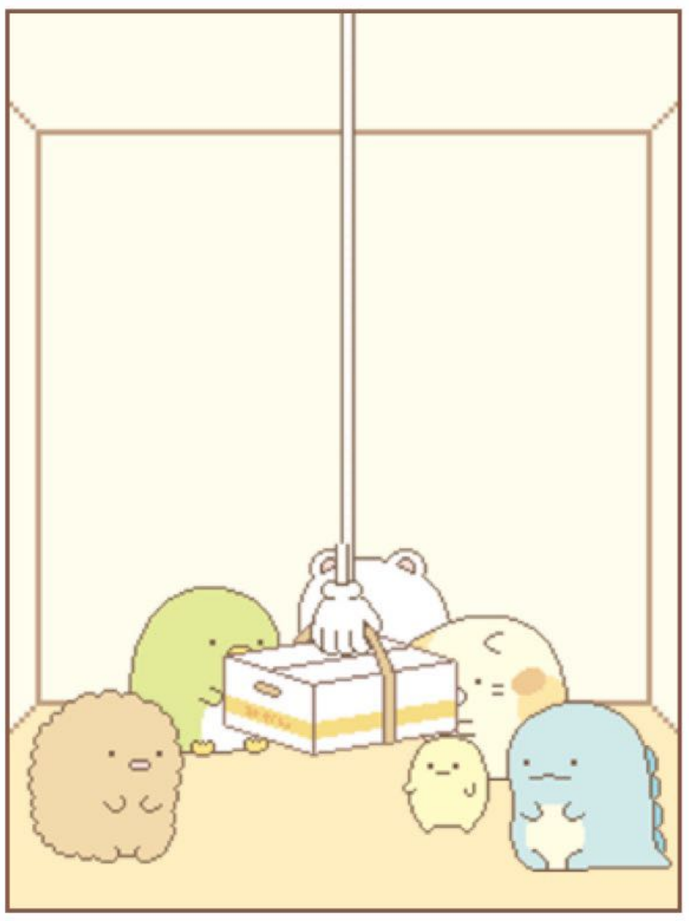

Items purchased from Online Supermarket arrives in Sumikkos' room.

Friendship Level

Check your Friendship Level with Sumikko here. The more you care for Sumikko, the more the Friendship Level increases. When Friendship Level is maxed out, a special item can be obtained.

Telescope

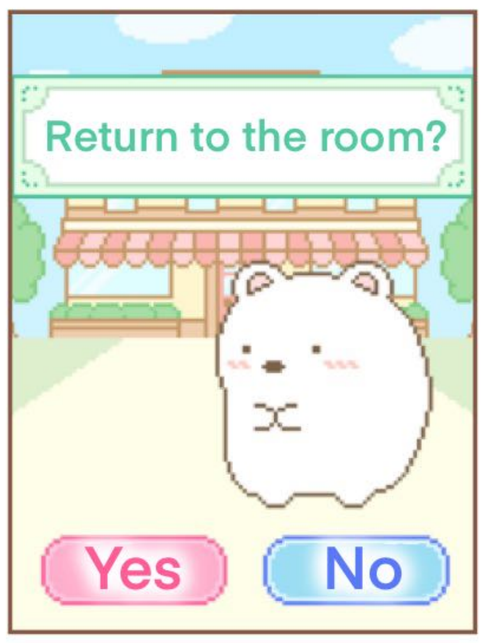

You can keep an eye on Sumikko when he goes out. Touch かえる to make Sumikko return to his room.

If you leave the device alone and it goes to sleep, Sumikko will automatically return to his room.

Camera

Camera App

You can use the Camera App to take photos.
There are 3 kinds of shooting:
Outer Camera, Selfie Camera,
Timer Camera
Pictures that are taken with the camera can be viewed in the Camera Album

*Even if the device is set to silent mode, the volume of the shooting will be heard.

Movie

Use the Movie App to shoot videos. The length of video that can be recorded is 6 seconds. Before shooting a video, you can set the frame and BGM.

Videos taken with the camera can be viewed in the Movie Album.

Photo Deco

Use the Photo Deco app to deco with frames and stamps and reflect effects. You can obtain frames and BGM from Gacha.

Album

Camera Album

You can view the photos that have been saved. You can save up to 80 photos. You can delete unwanted photos by selecting けす icon

Movie Album

You can view the videos that have been saved. You can save up to 6 videos. You can delete unwanted videos by selecting けす icon

※ Photos cannot be transferred out of this device.
※ If there is no free space to save new data, you will not be able to shoot until existing data is deleted.

Memory

You can add tags to photos and keep them as memories and view them again. When you create a memory, you can receive stamps from Sumikkos.

Mini Games

"Difficult" will be unlocked after downloading "Easy".

Fortune Telling

Let's shoot with the Shutter Button! Sumikko will tell your fortune.

※ It will not predict your future accurately.

Sumikko Rhythm

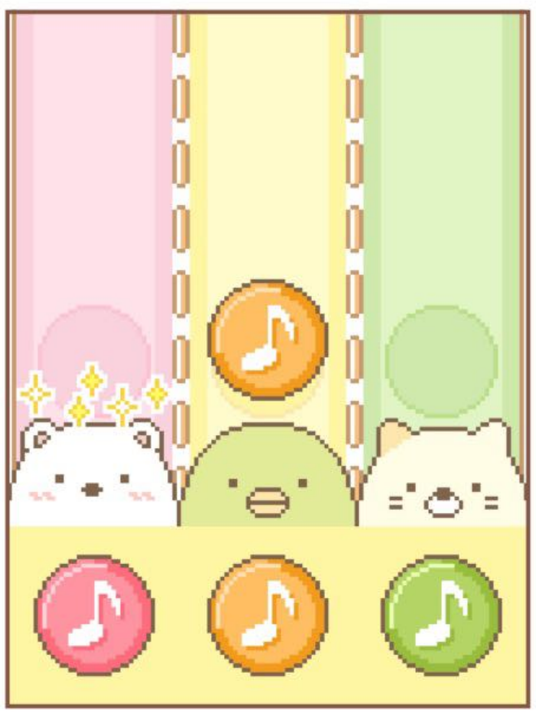

falls from above in 3 lanes. Press the button at the right timing!

Sumikko Train

Lets do a train dance with Sumikkos! When おして! appears, press button to help Shikoruma.

Neko and Sushi

Sushi is coming! When sushi comes in front of Neko, touch the button! Make sure not to accidentally eat wasabi!

Sumikko Sumo

Penguin? versus Shirokuma! Mash the button to win!

Tokage's Fishing

Lets go fishing with Tokage! When icon appears, close the device cover.

Mini Games

Tonkatsu's Bath

Touch and move to fry Tonkatsu in oil! Keep it at just the right temperature and be careful not to burn it!

Daruma Fell

Mash button repeatedly while Neko's back is turned. If the button is pressed while Neko is facing you, the game is over!

Sumikko Quiz

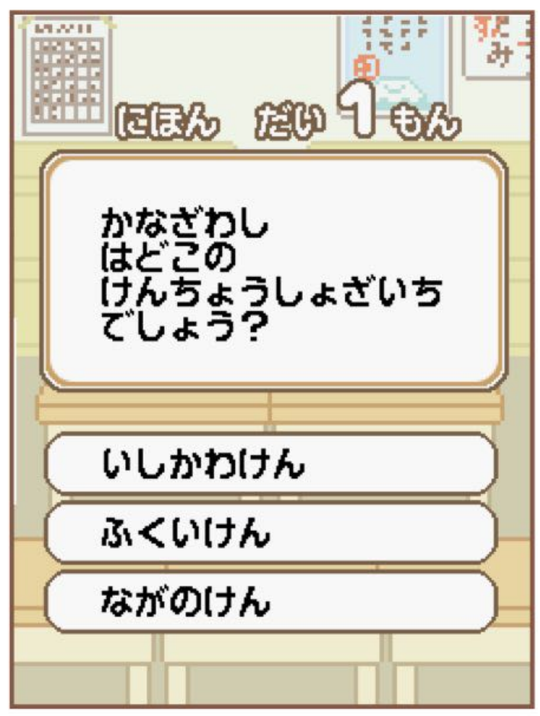

Choose the correct answer from 3 options! There will be total of 5 questions.

*Based on information as of October 2023.

Game Result

Playing games can earn you points. The amount of points you earn depends on the result of the game.

Phone

Have fun making phone calls with でんわ Phone and でんわちょう Phone Book app.

Touch でんわをきる to end the call.

Messages

Select the Sumikko icon to send a message to them. If you have received a stamp from Sumikko, the ! icon will appear on its profile picture.

Select a messsage by touching the text box below. After sending a message to Sumikko, it will reply with a stamp.

Other Apps

Pocket Watch

You can measure time. The maximum time you can measure is 9 minutes 59 seconds.

Sound Box

You can freely touch the sound icon to play sounds.

World Clock

This app tells you the time of various countries around the world. World Clock uses Daylight Saving Time throughout the year.

Alarm

You can set the alarm to ring at a desired time. If the device is switched off, the alarm will not ring.

Timer

You can set a timer for count down.

Music

You can enjoy listening to the BGM used in Sumikko Smartphone.

Calendar

Create your own schedule on your calendar by using stamps

Sumikko Illustrated Book

This app allows you to change and view the Sumikko clothes that you have collected. You can obtain clothes through Gacha.

Settings

You can change the settings of Sumikko Smartphone

Volume

You can set 6 levels of volume.

Brightness

You can set 5 levels of screen brightness.

Time

You can change the device time here.

Date

You can change the device date here.

Touch Point

You can adjust the touch point here.

Wallpaper

You can change the Lock Screen wallpaper here.

Reset

You can delete all the data and do a full reset of the device.